


IG1 RELAY

ON-VEHICLE INSPECTION

1. DISCONNECT CABLE FROM NEGATIVE BATTERY
TERMINAL
- CAUTION:
Wait at least 90 seconds after disconnecting the
cable from the negative (-) battery terminal to
prevent airbag and seat belt pretensioner activation.
2. REMOVE IG1 RELAY
- (a) Remove the IG1 relay from the instrument panel
junction block.
3. INSPECT IG1 RELAY
- (a) Measure the resistance of the IG1 relay.
- Standard resistance

ES

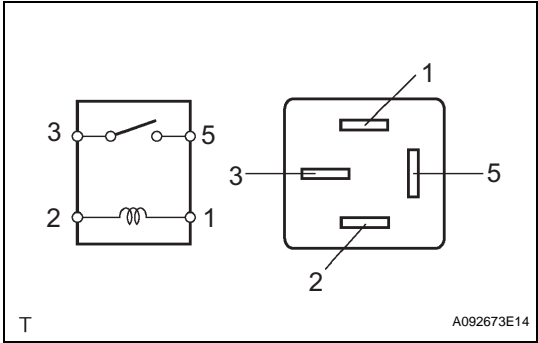

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

4. INSTALL IG1 RELAY
5. CONNECT CABLE TO NEGATIVE BATTERY
TERMINAL